

1321– Gravímetro portátil



Este item se refere a um aparelho que mede variações muito pequenas do campo gravitacional.

Tem aplicações no campo da mineralogia, mapeamento do sub-solo, prospecção de petróleo, etc.

Detalhado manual de instruções acompanha o conjunto, indicando as aplicações.

Nas páginas seguintes introduzimos o manual para que os interessados tenham acesso direto. Informações mais detalhadas sobre o equipamento, perguntas e respostas mais freqüentes e outros dados podem ser obtidos no site:

<http://www.lacosteromberg.com>



LaCoste & Romberg LLC
The first name in gravity since 1939



INSTRUCTION MANUAL

MODEL G & D GRAVITY METERS

11002 Metric Blvd., Suite 100
Austin, Texas 78758
Phone: (512) 346-0077
Fax: (512) 346-0088
e-mail: Info@LaCosteRomberg.com
[Http://www.LaCosteRomberg.com](http://www.LaCosteRomberg.com)

Copyright ©2002 LaCoste & Romberg LLC

T A B L E O F C O N T E N T S

P R I M A R Y I N F O R M A T I O N 1-1

INTRODUCTION	1-1
DESIGN	1-1
BASIC OPERATING INSTRUCTIONS	1-4
STARTING	1-4
TAKING THE FIRST READING	1-5
CONVERTING THE COUNTER READING TO MILLIGALS	1-9
MODEL G	1-9
MODEL G SURVEY OVER SMALL CHANGE IN GRAVITY	1-10
MODEL D WITH SINGLE CALIBRATION FACTOR	1-10
MODEL D WITH CALIBRATED WORLDWIDE RANGE	1-11
RELATIVE INSTRUMENT	1-13
CHECKING LEVELS AND SENSITIVITY	1-14
CHECKING THE TRANSVERSE LEVEL	1-14
CHECKING THE SENSITIVITY	1-16
CHECKING THE READING LINE	1-19
STANDARD ACCESSORIES	1-20
BATTERIES	1-20
CHARGER/BATTERY ELIMINATOR	1-21
ALUMINUM CARRYING CASE	1-21
ALUMINUM BASEPLATE	1-23
CABLES	1-22
ALLEN ADJUSTING TOOL	1-22
SPARE FUSES	1-22
SPARE LAMPS	1-23
MANUAL	1-23
CALIBRATION TABLE	1-23
SPECIAL METER SHIPPING CONTAINER	1-23
SERVICE	1-24
WARNING!	1-26
WARRANTY	1-27

O P T I O N S 2-1

CAPACITANCE BEAM POSITION INDICATOR (CPI)	2-1
ADVANTAGES	2-1
ELECTRONIC LEVEL (PENDULUM TYPE)	2-2
CHARACTERISTICS	2-2
ADVANTAGES	2-3
ELECTRONIC LEVEL (LIQUID TYPE)	2-4
VARIABLE DAMPING	2-5

EXTENDED RANGE MODEL D	2-6
COARSE AND FINE SCREW CALIBRATION OF MODEL D	2-6
LED READING LAMPS	2-7
DIGITAL THERMOMETER	2-7
DOUBLE OVEN	2-7
BASE PLATES (LEVELING DISKS)	2-7
BACKPACK	2-8
HIGH SPEED CRANK	2-8
ALIOD 100 ELECTRONIC FEEDBACK SYSTEM	2-9
TRAINING	2-17

FIELD PROCEDURES **3-1**

INTRODUCTION	3-1
PROMPT DATA REDUCTION	3-1
METER VIBRATION	3-2
TEMPERATURE EXTREMES	3-2
COLD	3-2
HOT	3-3
MICROSEISM	3-5
EARTHQUAKES	3-6
VEHICULAR AND MACHINERY VIBRATION	3-7
WIND	3-7
BASE SELECTION	3-8
RERANGING THE MODEL D	3-8
TRIPOD ON ASPHALTIC PAVEMENT	3-9
TRIPOD IN FROZEN COUNTRY	3-9
RADIO TRANSMITTERS	3-9
POWER SUPPLY IN REMOTE AREAS	3-10
OBSERVING GRAVITY BELOW GROUND	3-11
VERTICAL GRADIENT MEASUREMENTS	3-12
MORE THAN ONE METER ON A SURVEY	3-12
PERIODIC GRAVITY SURVEYS	3-13

METER DETAILS **4-1**

LEVELING SCREWS	4-1
NULLING DIAL POINTER	4-1
NULLING DIAL	4-2
EYEPIECE	4-3
ARRESTMENT KNOB	4-3
THE BLACK LID	4-4

REMOVING BLACK LID	4-4
WINDOWS IN LID	4-4
SCHEMATIC FOR OLDER METERS	4-5
SCHEMATIC FOR NEW METERS	4-6
THE FUSE	4-7
READING LIGHT SWITCH	4-8
READING LIGHT	4-8
MARK POWER FITTING	4-9
BATTERY & CABLE FITTINGS	4-10
LEVELS	4-11
SPIRIT BUBBLE LEVELS.....	4-11
ELECTRONIC LEVELS (PENDULUM TYPE)	4-13
ADJUSTMENT	4-13
DETERMINING A MORE PRECISE READING LINE.....	4-14
REPAIR	4-15
ELECTRONIC LEVELS (LIQUID TYPE)	4-16
CAPACITANCE BEAM POSITION INDICATOR (CPI)	4-17
ADJUSTING GALVO GAIN & ZERO	4-19
GALVO HIGH-LOW SWITCH	4-19
REPLACING THE GALVANOMETER	4-20
VARIABLE DAMPING	4-22
ADJUSTING DAMPER	4-22
ELECTROSTATIC POSITIONER	4-23
CAUTIONS:	4-24
REPLACING THE CHEATER SWITCHES	4-25
TO SERVICE THE SWITCHES.....	4-25
CHEATER SWITCH REMOVAL	4-26
REPLACING THE NULLING COUNTER	4-27
REPLACING THE HEATER CONTROL MODULE	4-28
CHANGING OPERATING TEMPERATURE	4-29
THEORY	4-29
PROCEDURE	4-30
GENERAL NOTES	4-31
BIMETALLIC THERMOSTAT	4-32
CHECKING THE METER SEALS	4-33
CHECKING FOR MECHANICAL HYSTERESIS	4-35
DOUBLE OVEN	4-37
STANDARD CHARGER/BATTERY ELIMINATOR	4-38
HIGH SPEED CRANK	4-43
OPERATION	4-43
PHYSICS OF THE SENSOR	4-44
ZERO LENGTH SPRING	4-47
INSENSITIVITY TO LATERAL VIBRATIONS	4-48
REFERENCES:	4-49

CALIBRATION	4-50
MODEL G RELATIVE CALIBRATION.....	4-51
MODEL G ABSOLUTE CALIBRATION.....	4-53
MODEL D CALIBRATION.....	4-55
SELECTION OF CALIBRATION MASS.....	4-56
FUTURE IMPROVEMENTS IN CALIBRATION.....	4-57
HISTORY	4-58
ACKNOWLEDGEMENTS	4-60
SHIPPING PRECAUTIONS	5-1
TAPE CLAMP	5-1
RETRACT LEVELING SCREWS	5-1
I.D. INSIDE CASE	5-1
NO BATTERIES WITH METER	5-1
KEEP LIGHT WEIGHT	5-2
FOAM ATOP METER	5-2
USE SPECIAL SHIPPING BOX	5-2
FRAGILE SIGNS	5-2
PACKING ACCESSORIES	5-2
TELEPHONE	5-3
DOMESTIC	5-3
FOREIGN	5-3
RECEIVING SHIPMENT	5-3
SHIPPING BOX SELECTION	5-4
WEIGHTS & DIMENSIONS	5-5
METER.....	5-5
BATTERY.....	5-5
CARRYING CASE.....	5-5
METER W/BATTERY & CARRYING CASE.....	5-5
SHIPPING WEIGHTS & DIMENSIONS	5-6
BOX 1.....	5-6
CONTENTS.....	5-6
BOX 2.....	5-6
CONTENTS.....	5-6